

# The Hideaway® Compact Installation Instructions

## Important Installation Information:

For handle pull models KC15H, KC20H, KC30H, KC40H, KC50H: If hinges are used that do not allow the door to clear the opening fully, allow an extra 10mm width. Installation also requires that the top door hinge be 150mm from the top of the door to allow clearance for the bin handle. Refer to our website or Hideaway Brochure for your model measurements.

## Step 1 - Unpack Hideaway Bin

- Remove all polystyrene.
- Remove the bucket/s.
- Please leave the Glad Sample Pack (NZ only) and instructions inside the bucket for owner.

## Step 2 - Remove the tracks from unit (see Fig 2a & 2b)

- Place the mounting panel upside down on a flat surface with the tracks facing upwards.
- Fully extend the tracks.
- Find the black levers located on the outer side of both the left and right track.
- Simultaneously, push the left lever down and the right lever up and pull inner of the tracks towards you until it separates completely from the unit. Set track inner with collar, handle/door bracket attached aside in a safe location.
- Push the outer tracks attached to the mounting panel back inside the unit.

## Step 3 - Install your bin within your cupboard / carcass

- Position the mounting panel (now clear of track inner, collar & handle/door bracket) inside the cupboard beneath your carcass / shelf.
- Position in the center of the carcass space and ensure the front of the mounting panel is sitting flush with the front of the carcass. Mounting points are located in the mounting panel for fixing (top mount and/or side mount options). Secure the mounting panel into place with the Surefix screws provided. Any additional mounting holes added will null and void warranty.

## Step 4 - Side mounting installation within your cupboard / carcass




- Your unit has side mounting points, as shown in Fig 1. If side mounting, the internal space of the cabinet must be within the advertised width.
- The side mounting points are to be secured with 16mm Surefix screws provided.

## Step 5 - Reattach the track inner and collar to the installed mounting panel

- Ensure the outer tracks attached to the mounting panel are pushed all the way inside the unit. On these outer tracks ensure the inner slider is pulled all the way towards the front of the unit.
- Line up the inner tracks (with collar, handle/door bracket attached) to the outer tracks that are attached to the mounting panel which is now installed in your cupboard.
- Push the inner tracks all the way in until the unit closes, this will engage the tracks. Pull unit open again. The unit should move with ease indicating correct positioning.

## Step 6 - Fix cabinet fascia to door bracket of bin (door pull bins only)

- Place a 4mm self tapping screw into the center hole of the door bracket – ensure the point of the screw is only protruding approx 3mm.
- With the bin closed fully, align the front fascia of the cupboard against the door bracket. A small hit with your hand to the location of the screw will help provide a drilling indication.
- Lie cabinet fascia on a flat surface with the internal part of the door facing upwards.
- Remove the track inner once again - to do this:
  - Fully extend the tracks.
  - Find the black levers located on the outer side of both the left and right track.
  - Simultaneously, push the left lever up and the right lever down (refer fig 2a & 2b) and pull

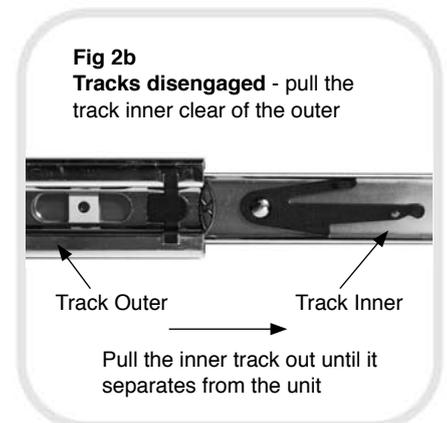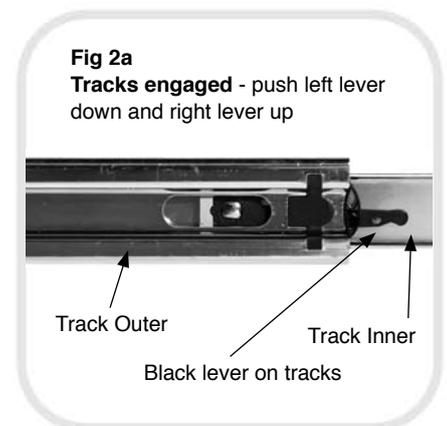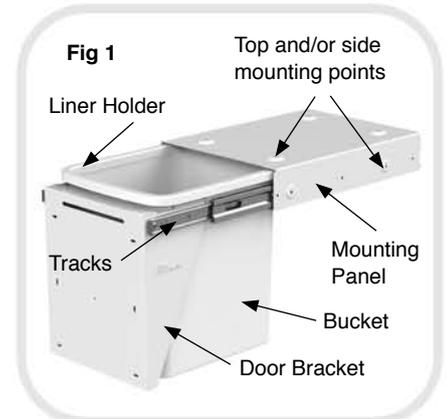

inner of the tracks towards you until it separates completely from the unit. Set track inner with collar attached aside in a safe location.

Push the outer tracks attached to the mounting panel back inside the unit.

- Align the door bracket with the drilling mark on your cabinet fascia. Drill and tighten center screw fixing the door bracket of the bin to the cabinet fascia.
- Re install the track inner (now with the cabinet fascia attached) to the tracks inside the mounting panel (refer step 5).
- Check positioning and align, proceed to marking, screwing and tightening the remaining screws. Side, up & down adjustment is provided on the door bracket.

### Step 7 - Place bin bucket/s into checkouts on collar

- Place bucket/s into the checkouts provided on the collar of the unit. If the bucket/s do not sit within these checkouts the unit will not close properly.
- **Trade** - please leave the Glad sample pack inside the bucket.
- **Homeowner** – you will find a Glad sample pack in the base of your bucket. Slide the Glad Kitchen Tidy Bag into your bucket/s ensuring the bag will not interfere with the tracks. (NZ only)
- Place liner holders on top of bucket/s.

### Installation complete!

## Questions?

### NEW ZEALAND

Phone 09 426 7456

Email [info@hideawaybins.co.nz](mailto:info@hideawaybins.co.nz)

Web [www.hideawaybins.co.nz](http://www.hideawaybins.co.nz)

### AUSTRALIA

Freephone 1800 042 642

Email [info@hideawaybins.co.nz](mailto:info@hideawaybins.co.nz)

Web [www.hideawaybins.com.au](http://www.hideawaybins.com.au)

